

## Control Indoor Humidity.

Installing a GeneralAire® Whole House Humidifier can reduce allergy and asthma symptoms, minimize risk of infection, protect valuables (such as furniture, woodwork and musical instruments) *and* save you money.



### How The 1137 Works:

A fan inside your GeneralAire® 1137 Elite Series Flow Through Humidifier pulls warm air from your furnace through the water-soaked Vapor Pad®, where it absorbs additional moisture. The moistened air then returns for distribution throughout your home via your home's duct system.

Details inside or go to: [www.generalfilters.com/model1137](http://www.generalfilters.com/model1137)

### Maintenance

Maintenance of your new GeneralAire® 1137 Legacy Series Flow Through Humidifier is minimal. To ensure peak performance and reliable operation, simply change your Vapor Pad®. Go to [www.generalfilters.com / support center / video library](http://www.generalfilters.com/support-center/video-library) to watch a video demonstrating how to perform maintenance on your 1137.

### Install A Humidifier In Your Home To:

#### Protect Your Family's Health:

Low humidity is where viruses can thrive and cause your throat and nasal passages to dry. This leads to nose bleeds, increased risk of infection, colds, flu and other respiratory ailments. Dry air can trigger asthma and allergy symptoms. Air that's too dry causes dry/itchy/cracked skin.

#### Protect Your Valuables:

Dry air in your home can cause expensive artwork, wood flooring, cabinets, furniture and musical instruments to crack. Dry air increases annoying static shocks that can damage electronics.

#### Save Money:

Since dry air can cause woodwork to crack, resulting gaps in windows & doors let cold outside air in. In addition, dry air feels colder. Take the chill out with a 1137. Turn your thermostat down and save money.

### Why A Whole-House Unit?

- Treats Your Whole House 24 / 7 / 365
- Requires Minimal Maintenance
- Out of Site
- Quiet



Designed & Assembled  
in Michigan, USA

**Cover Removal Screws**

- Remove screws, lift off water distribution tube and trough to replace Vapor Pad®.

**Quiet Operation**

- You'll forget it's there!

**Water Intake Valve**

- Brings water into the water distribution trough.

**Optimal Installation Option**

- Mounts on warm air plenum for maximum humidification results.

**Sturdy Drain Pan**

**Water Distribution Trough**

- Distributes water throughout Vapor Pad®.

**Cover**

- Made with an ultra-violet stable automotive-grade plastic for long-lasting durability.

**Reliable**

- Durable motor includes oil ports to oil your motor once per year, enhancing the performance and life of your 1137 humidifier.

**Water Drain Tube**

- Water automatically drains from your humidifier.

**Included With M Models**  
**MHX3C Manual Humidistat**



Your new 1137 comes with an easy-to-use MXH3C humidistat. Simply turn the dial to the left for more humidity, and to the right for less.

**How Much Humidity Do I Need?**

Ideally, your home's humidity levels should stay between 40% and 60%. Outside that range, your risk of being adversely affected increases.

**Winter Settings**

During winter months, be sure the water supply is turned on and your humidistat is set somewhere between 40% and 60%.

**Replacement Vapor Pad®**

- GFI #7002: 990-13
- For optimal performance, replace your Vapor Pad® at the beginning of each heating season, and again mid-season.



Spec Sheets Are Available On [www.GeneralFilters.com](http://www.GeneralFilters.com) (Support / Literature).

Our Brands  
**GeneralAire**



General Filters, Inc.  
43800 Grand River Avenue  
Novi, Michigan 48375  
Toll Free: (866) 476-5101  
[www.generalaire.com](http://www.generalaire.com)



Canadian General Filters, Ltd.  
400 Midwest Rd.  
Toronto, ON M1P3A9 Canada  
Toll Free: (888) 216-9184  
[www.cgfproducts.com](http://www.cgfproducts.com)